

1. Warning: Risk of fire, personal injury, and electric shock.

- 1) Make sure light set is not connected to power before starting.
- 2) Keep wires clear of being pinched or cut during assembly, installation, or use. Discard products with cut wire insulation.
- 3) Do not press or grasp bulbs during assembly or installation.
- 4) Watch for bulbs that may have broken if parts shifted in transit.
- 5) This product is not a toy, for adult use only. It should not be played with or placed where children can reach it.
- 6) Please read all instructions and warnings included with this product before using.

2. Enclosed Parts

Metal frame with cap: 10 pcs

Fabric lantern: 10 pcs

10LT string: 1 pc

3. Assembly

- 1) Insert metal frame into lantern as shown in Figure 1.
- 2) Make sure lantern is evenly covering metal frame, as shown in Figure 2.
- 3) Insert lampholder into cap on top of metal frame as shown in Figure 3.
- 4) Make sure lamp holder is securely in position in the notched part of metal frame as shown in Figure 4.
- 5) Plug light set into power outlet and check to see that all lights are working.

4. Troubleshooting:

If lights do not work,

- 1) Make sure there is power to the outlet and product is plugged in.
- 2) Check for missing bulbs or broken bulbs.
- 3) Check for loose bulbs by firmly pushing bulbs into the socket.
- 4) Check for a blown fuse in the light set plug.

Instructions

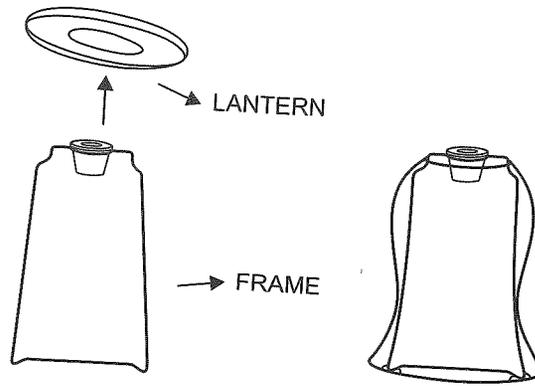


Figure 1

Figure 2

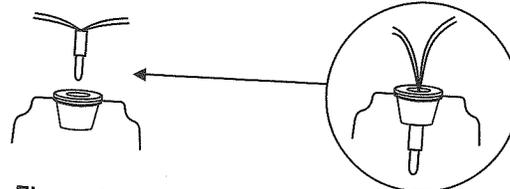


Figure 3

Figure 4

MODEL NO:205-278

ITEM# 746739-102





PRINTED IN CHINA

© 2017 Target. The bullseye Design is a trademark of Target Brands, Inc. All Rights Reserved.

USER SERVICING INSTRUCTIONS

To replace the fuse:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- Remove fuse carefully. Turn plug over to remove fuse.
- RISK OF FIRE.** Replace fuse only with 3 Amp, 125 Volt fuse provided with product.
- Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- RISK OF FIRE.** Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

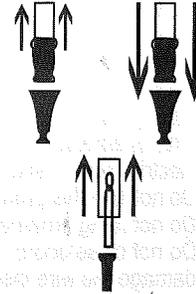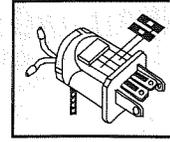

To replace a lamp:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Pull lamp and plastic base straight out of lampholder.
- Replace lamp with only 3.6 Volt, 0.072 Watt, LED type lamp (provided with product).

- If the new lamp base does not fit in lamp holder, follow the steps below before step 3.
1. Remove the base of burned out lamp by straightening lamp leads and gently pull lamp out.
2. Thread leads of new lamp through holes in old base with one lead in each hole.
3. After lamp is fully inserted into base, bend each lead up, like other lamps in the light set so that the leads will touch the contacts inside the lamp holder.

CAUTION: a) Risk of fire. This product does not contain lamp shunts, which allow the product to operate if one lamp burns out. Replace lamps only with the spare lamps provided with this product.

b) Replace lamps only with 3.6 volts, 0.072 watt spare LED lamps provided with this product.

Connecting Sets End to End:

CAUTION: This string is rated 2.4 Watts (0.02Amps), do not overload. Connect other Lighting Strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8Amps) total. If connecting to a lighting string that does not have a wattage (W) rating (found on the tag within 6 inches of the plug), Calculate the wattage (W) as follows: Multiply the current (A) which is on the flag type label located within 6 inches of the plug, by 120. For example, string is rated 120V, 60Hz, 0.02Amps, $0.02 \times 120 = 2.4$ Watts. Add the wattage of each light string together for a total of 216 Watts or less. (Do not exceed 216 Watts.)

FOR INDOOR AND OUTDOOR USE.

CUSTOMER SERVICE INFORMATION: If you have questions about this product or its use, refer to our web site at www.seasonalspecialties.com for FAQ's or call 1-855-995-6598 Monday through Friday 9:00 AM to 5:00 PM CST

SSC NO: 746739-102 - Z2528 - 17

MODEL NO. 205-278

E309873, 101

Rev C 100325

Printed in China

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product is equipped with push-in type LED lamps. Do not twist lamps.
- n) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- o) Read and follow all instructions that are on the product or provided with the product.
- p) **SAVE THESE INSTRUCTIONS**

USE AND CARE INSTRUCTIONS

- a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- b) If the product is placed on a tree, the tree should be well secured and stable.
- c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- d) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- e) When not in use, store neatly in a cool, dry location protected from sunlight.
- f) The LED lamp has polarity. Do not deliberately change the direction of the LED lamp in the lampholder.