




 
# Dueling Snow Blasters

For Ages  
**3 - 6 years**  
Item: 9335


**Contents**



2 X DUELING SNOW BLASTERS



1 X SET SOFT AIR-FILLED BALLS



2 X REPAIR PATCHES



**WARNING:**  
KEEP AWAY FROM FIRE.


**CAUTION:**  
USE ONLY UNDER COMPETENT SUPERVISION.  
SEE PRODUCT AND INSTRUCTIONS FOR  
ADDITIONAL WARNINGS.

MINIMUM WEIGHT 30 LBS.  
MAXIMUM WEIGHT 60 LBS.

**CAUTION:** Adult  
assembly required.

**BAG OF BALLS**

**WARNING:** THIS BAG IS A SUFFOCATION HAZARD. EMPTY BALLS INTO BALL PIT AND DISCARD BAG AWAY FROM CHILDREN. TO AVOID DANGER OF SUFFOCATION KEEP THIS PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES, OR PLAYPENS. THIS BAG IS NOT A TOY.



**NOTE: PLEASE BE ADVISED THAT THE ITEM MAY DEFLATE BECAUSE OF TEMPERATURE CHANGES. DUE TO THIS, YOU MAY BE REQUIRED TO ADD AIR ON A DAILY BASIS.**

**IMPORTANT:**  
Before set up, please check that you have all parts necessary for assembly. In addition, we recommend that you separate all parts to expedite assembly.

**HELLO!**

**HERE TO HELP!**  
Contact Customer Service:  
**1-888-752-TOYZ (8699)**  
or send us an email at:  
**help@bettertoyz.com**



- WARNING:**
- Competent adult supervision is required at all times. responsible adults should instruct children on proper use of this product.
  - Do not allow your child to attempt somersaults or stunts whilst on product.
  - Read all instructions carefully before assembly.
  - Only use under constant adult supervision.
  - **NOT** for adult use.
  - **DO NOT** allow children under 3 years of age and over 6 years of age.
  - Place the product on a soft flat surface, like grass, sand or carpet. **NEVER** place the product on a hard surface.
  - Remove shoes, socks, eyeglasses, helmets, headgear, loose clothing, hoods, scarves, sharp objects or any clothing containing drawstrings before playing in the unit.
  - **DO NOT** allow toys or any objects inside the unit or in the surrounding area, except for the items included in this package.
  - Examine the unit periodically for potentially unsafe conditions such as abrasions, holes or tears.
  - Ensure the play area is free from hazards such as furniture, walls, sharp objects and other hard surfaces before setting up the unit or playing in it.
  - Clean the item with a damp cloth.
  - **NEVER** use item outside during bad weather circumstances or thunderstorms.
  - **DO NOT** continue to use this product if any part is damaged or broken.
  - **DO NOT** leave the unit in any area where it might become damaged.
  - This tent is intended for domestic family use only. Not for commercial use or as a rental.
  - **DO NOT** use this unit in a manner other than specified in instructions.
  - **DO NOT** attach items such as jump ropes, pet leashes, cables, etc. to product as they may cause a strangulation hazard.
  - **DO NOT** drag the unit, as it may cause irreparable damage.
  - **DO NOT** allow child to attempt to climb the item as doing so may cause a tipping hazard.
  - Keep pets away from the product.
  - **DO NOT** leave children unattended at any time.
  - Allow only one child at a time.
  - The repair patch is not a toy. Keep repair patch properly stored and away from children.
  - Please contact our customer service department for assistance with damaged or broken item.

While every attempt is made to embody the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury resulting from use. All merchandise is sold on this condition, which no representative of the company can waive or change.

## Before you Begin:

- Only adults must set up this product.
- Remove the product from the packaging. Save packaging for storage when finished playing.
- Discard all plastic bags and fasteners safely AWAY from children. Preferably into trash and out of reach from children and pets.
- Carefully unfold the product in a flat area which has been cleared of all objects of any kind.
- **DO NOT** use on hard floors like concrete or wood floors.
- **DO NOT** set up this product on an uneven surface which may cause the unit to slide or tip over.

### Minimum clearance play zone:

Must have a 2m (6.6 ft.) obstacle free zone around the product.



# INSTRUCTIONS

**IMPORTANT:** Before set up, check that you have all parts necessary for assembly. In addition, we recommend that you separate all parts to expedite assembly.


1. Carefully unfold item in a soft, flat and even surface which has been cleared of all objects.
2. Lift the air valve plug from the inflation/deflation opening on the edge of the unit.
3. Place the hose of pump (hose and pump not included) into the valve opening.
4. Turn the pump ON and inflate the unit.

**NOTE:** Pump may be purchased at most hardware sporting goods store and other retail outlets. Some pumps have inflate and deflate valves. Follow pump instructions when attaching hose.

**CAUTION** – **DO NOT** allow children to play on or in the unit until it is fully inflated. Inflate the unit only to the point that it is firm but not hard and wrinkles are still visible in the area of the welded seams. Do Not over-inflate the unit. Doing so may cause damage to the unit and bodily injury to the child should the unit fail from over-inflation. Inflation time will depend upon the type of pump being used. Once the unit is inflated, remove the hose and close the inflation/deflation opening by pressing the plug into the opening firmly to assure there will be no air leakage.

- Now repeat for the other remaining plugs.
- Allow only one child at a time to play with the product.

**WARNING:** DO NOT JUMP ON PRODUCT.

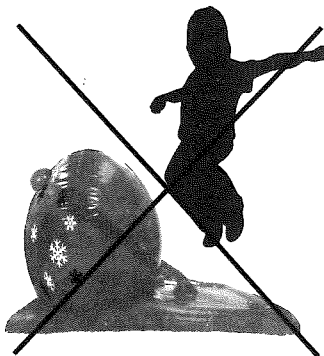

DO NOT STAND IN FRONT OF OPENING WHERE BALLS COME OUT WHILE ANOTHER CHILD IS KNEELING DOWN ON PILLOW.




**ALLOW ONLY ONE CHILD AT A TIME TO PLAY WITH UNIT.**

# HOW TO USE THE DUELING SNOW BLASTERS

1

Locate air valves and inflate Blaster.

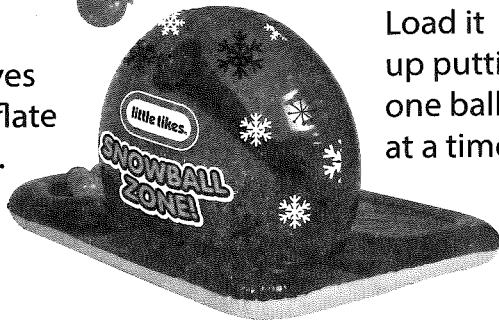

2

Load it up putting one ball at a time.

4


Watch the balls pop!



**WORKS BEST WITH BALLS INCLUDED (D:2.25")**

3

Kneel down on the pillow from standing position!

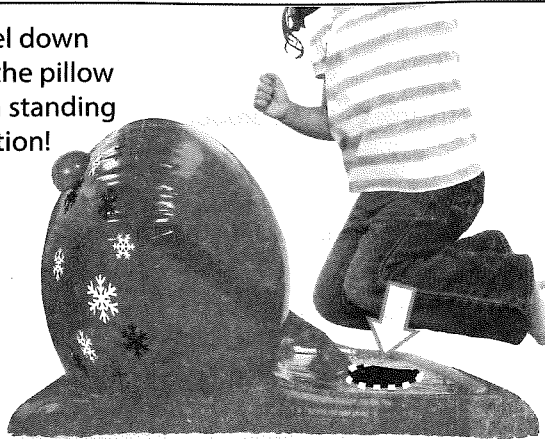

**WARNING** - Instruct the child how to play with the Dueling Snow Blaster.

## REPAIRING A PUNCTURE

In the event the Dueling Snow Blaster is accidentally punctured and adult must perform the following steps. Keep repair patches away from children.

1. Deflate the item, clean the punctured area with water and allow it to dry.
2. Cut a portion of the patch allowing approximately 1 ½" of excess patch material on all sides of the opening to be patched and round the corners
3. Remove the backing of the patch material, position the patch over the damaged area and smooth out any bubbles with a paper towel.
4. Allow the item to sit for 30 minutes before re-inflating.

**Repair Patch: Keep away from children. For Adult use only.**

A repair patch has been included with the product to repair small leaks and holes.

## DEFLATION & STORAGE

An adult must deflate and store the unit. Here's how:

1. Remove the child from the unit.
2. Remove the plug from the inflation/deflation opening.
3. Allow the unit to deflate completely.

**NOTE:** If you have purchased a pump that has both inflating and deflating functions, make sure the pump is on deflating mode. Then, simply place the end of the hose into the inflation/deflation opening in the unit, turn on the pump and the unit begin to deflate. If your pump does NOT have this feature, once the side walls of the unit are deflated, press gently on the top of the unit to help air escape from the deflation opening. DO NOT jump or lie on the unit to help deflate it as doing so may damage the unit and cause bodily injury to the jumper.

Once deflated, fold the unit as it came out of the package for storage. Store indoors in a dry place away from children's reach.

DO NOT leave the unit in any area where it might become damaged.

Cleaning Instructions: Surface wash with water only. Do Not use chemicals or abrasives.

Dry thoroughly before storing.

 **WARNING:**

1. Unit is intended for domestic family use only. Not for use in public areas or as a rental.
2. DO NOT use this unit in a manner other than specified in instructions.
3. Instruct children on proper use of the unit.
4. DO NOT allow attachment of items such as jump ropes, pet leashes, cables, etc., to product as they may cause a strangulation hazard.
5. DO NOT drag the unit as doing so may cause irreparable damage.
6. DO NOT place the Dueling Snow Blasters on hard surfaces, such as concrete or wood floors.
7. Allow only ONE CHILD at a time to play with the unit.
8. DO NOT allow toys or any other objects inside the unit or in the surrounding area. Beside balls included with product.
9. Remove shoes, socks, eyeglasses, helmets, headgear, loose clothing, hoods, scarves, sharp objects or any clothing containing drawstrings before playing in the unit.
10. Examine the unit periodically for potentially unsafe conditions such as abrasions, holes or tears in the plastic.
11. DO NOT allow child to attempt to climb on the wall as doing so may cause a tipping hazard.
12. Keep pets away from the product.
13. Maximum allowable weight of person using the unit 60 lbs.
14. Check the product during use and re-inflate as appropriate.
15. Ensure the play area is free from hazards such as furniture, walls, sharp objects and other hard surface before inflating the unit or playing in it.
16. DO NOT leave children unattended at any time.
17. DO NOT use as a flotation device. Near swimming pools, any body of water, or snow.
18. DO NOT use with persons under 3 years of age and over 6 years of age.
19. DO NOT use on or near stairways, hills, driveways and roadways.
20. DO NOT dive on or jump off of item.
21. NOT to be used as a bed as a child may become wedged between the wall and floor and suffocate.
22. DO NOT use electric air pump if water or moisture is present. This may result in electric shock.
23. NOT FOR ADULT USE.

 bettertoyz

© 2018 Better Sourcing Worldwide, Ltd.  
1835 East Hallandale Beach Blvd, Unit 635,  
Hallandale Beach, FL 33009

 little tikes.

[www.littletikes.com](http://www.littletikes.com)  
® & © Little Tikes. U.S.  
& other countries.

 MGA  
ENTERTAINMENT

Used under license by  
Better Sourcing Worldwide, Ltd.



**HERE TO HELP!**

**PLEASE DO NOT RETURN TO STORE.**

For more information or questions,  
Contact Customer Service:  
**1-888-752-TOYZ (8699)**  
or send us an email at:  
[help@bettertoyz.com](mailto:help@bettertoyz.com)



Made in China. Printed in China  
Contents, including specifications and colors,  
may vary from photos depicted on package.  
Keep content details for future reference.

Item: **9335**