

备用品箱

Household Essential Box

本产品外观简洁大方，方便携带，可用于放置各类小物件，并且配有密码锁功能，有一定的隐私和防盗作用，适用于旅行、出差携带随身物品。
This product looks simple and elegant, easy to carry, can be used to keep all kinds of small items, and with coded lock, there is a certain extent of privacy and security. It is very suitable for carrying belongings during traveling or on business trips.



功能介绍 Function

- | | |
|-------------|-----------------------|
| 1-综合放置区 | 1- Comprehensive area |
| 2- (瓶装) 放置区 | 2- (Bottled) area |
| 3-密码锁 | 3- Code lock |

注意事项及保养存储

1. 避免从高处跌落而损坏产品;
2. 初始密码为四个“0” 设置好密码后请妥善保管;
3. 为使用者考虑，尽可能不要存放过于贵重的物品;
4. 请把产品储存在室内。

 
Notes

1. Avoid damaging the product by falling from a height.
2. The initial password is "0000", please well keep the password after setting it.
3. For safety considerations, try not to store too valuable items.
4. Keep the product indoor.

密码锁密码设置步骤

Steps to set the code of the cipher lock


1. 出厂时的初始密码是0000，前后图形如下
The initial code is 0000, and please check pictures below



2. 在确认完初始密码后，此时可将密码锁的拨杆拨到A位置，如图
Switch the lever from Point B to Point A, after confirm about the initial code



 3. 再设置您所需要的密码，如1314
Set your own code



4. 在设置完成密码后再将拨杆回到B位置
Switch the lever from Point A to Point B, after the code is set



5. 如果需要改变密码，请记住您之前设置的密码，并重复第二到第四步，以设置新密码
Please memorize the code that you set and follow step 2, step 3 and step 4 to set a new code

温馨提醒：因为箱子设计时为了确保安全性，是没有预留外部解锁装置的，且箱子材质非常结实，组装时是采用倒扣式卡扣与螺丝双重加固，不易拆除。提醒您设置密码时一定要留意操作的步骤，特别是拨动数字的时候要注意，新的密码数字一定要对准，再将拨杆拨回B的位置，新密码不要忘记了，以免给您带来不必要的困扰哦~

Kind reminder: For the safety purpose, this box does not reserve any position for outer unlock device in its structural design and is not easy to dismantle after assembly, please pay full attention to each steps of code setting. Especially make sure the 4 digits lock codes set is exactly in parallel line, then put the code set lever back to "B" position, do not forget your set codes to avoid any inconvenience.

备用品箱系列维修方法/ Repairing guidelines of Household Essential Box

1. 如下图所示，用手加力扳开备用品箱顶盖与中框连接的活动部。

As below images, take apart of top cover and body from the joint with your hands.



用双手抱住箱子，用力分开
Hold the box with hands



扳开这两个连接部位
Take apart of box from joint

2. 这时用螺丝批拆除箱子里面紧固密码锁的2个螺丝，使密码锁与中框分离后，再去下顶盖。

Screw out the 2 screws of cipher lock, then split the cipher lock and frame, and take off the top cover.



用螺丝批转开密码锁盖上2个螺丝。
Screw out 2 screws of cipher lock



用手掰开密码锁盖及密码锁。
Take apart cipher lock from frame



这是取下顶盖。
Take off top cover

3. 再对密码锁进行解密，方法：找到4个密码轮对应的缺口位置。然后取下密码锁及密码锁盖。

Decipher, method: make sure 4 grooves be in line, then take off the cover and cipher lock.




找到4条密码轮的缺口位置对齐。
Make sure 4 grooves be in line.



解锁后取下密码锁盖及密码锁。
Take off the cover and cipher lock.

4. 重新更换密码锁，并依次装上密码锁后盖和2个紧固螺丝。

Replace a new cipher lock, mount cover and screw in 2 screws.

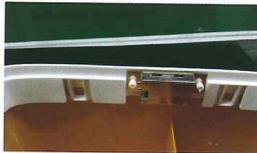

重新安装密码锁
Replace a new cipher lock



安装紧固螺丝2个
Screw in 2 screws

5. 确认锁钩是否变形，如有轻微变形时，要把锁钩进行简单整形。最后在重新安装上顶盖。

Check whether joint catch is deformed or not, if deformed, fix deformation, in final, mount top cover.



把顶盖2个插销对准中框缺口插下去。
Insert joint catches into groove of body precisely.



Scan the QR code for user manual video

This is a good product:

- 1. The initial code is 0000**
- 2. Set code: Switch lever on the back of lock from B to A, then set your new code horizontally, and then switch the lever from A to B, done!**